

EITMS does not operate within the first four minutes after starting the engine.

Activation:

If ALL of the following conditions are met, the EITMS turns off the rear cylinder fuel injector.

- Touring (except FLHR, FLHRC, FLHRCVO, FLHRSE) and FLHTCUTG: AAT sensor exceeds 80°F (27°C).
- FLHR, FLHRC, FLHRCVO, FLHP and FLHTP: ET sensor exceeds 288°F