

1975 FX/FXE 1200 WIRING DIAGRAM KEY

- | | |
|---|---|
| 1. Headlamp housing | 26. Rear terminal board terminal |
| 2. Socket-plug combination | 27. Rear terminal board terminal |
| 3. Socket-plug combination | 28. Rear terminal board terminal - bottom |
| 4. Socket-plug combination | 29. Speedometer light |
| 5. Wiring harness | 30. Oil pressure signal switch |
| 6. Headlamp beam switch | 31. Neutral switch |
| 7. Horn switch | 32. Neutral indicator light |
| 8. Ignition breaker (timer) | 33. Oil signal lamp |
| 9. Wire connector | 34. High beam indicator lamp |
| 10. Battery positive terminal | 35. Tail and stop lamp |
| 11. Battery negative terminal | 36. Tachometer |
| 12. Frame lug bolt | 39. Lighting circuit breaker |
| 13. Stop lamp switch - rear | 40. Ignition circuit breaker |
| 14. Switch "L" lights terminal | 41. Accessories circuit breaker |
| 15. Switch "I" ignition terminal | 42. Starter switch |
| 16. Switch "B" battery terminal | 43. Right direction signal switch |
| 17. Regulator-rectifier module | 44. Left direction signal switch |
| 18. Alternator to module connector plug | 45. Direction signal flasher |
| 19. Alternator stator | 46. Left front direction lamp |
| 20. Horn | 47. Right front direction lamp |
| 21. Headlamp socket | 48. Left rear direction lamp |
| 22. Engine stop switch | 49. Right rear direction lamp |
| 23. Stop lamp switch - front | 50. Starter relay (FXE only) |
| 24. Ignition coil | 51. Starter solenoid (FXE only) |
| 25. Rear terminal board terminal - top | 52. Starter motor (FXE only) |

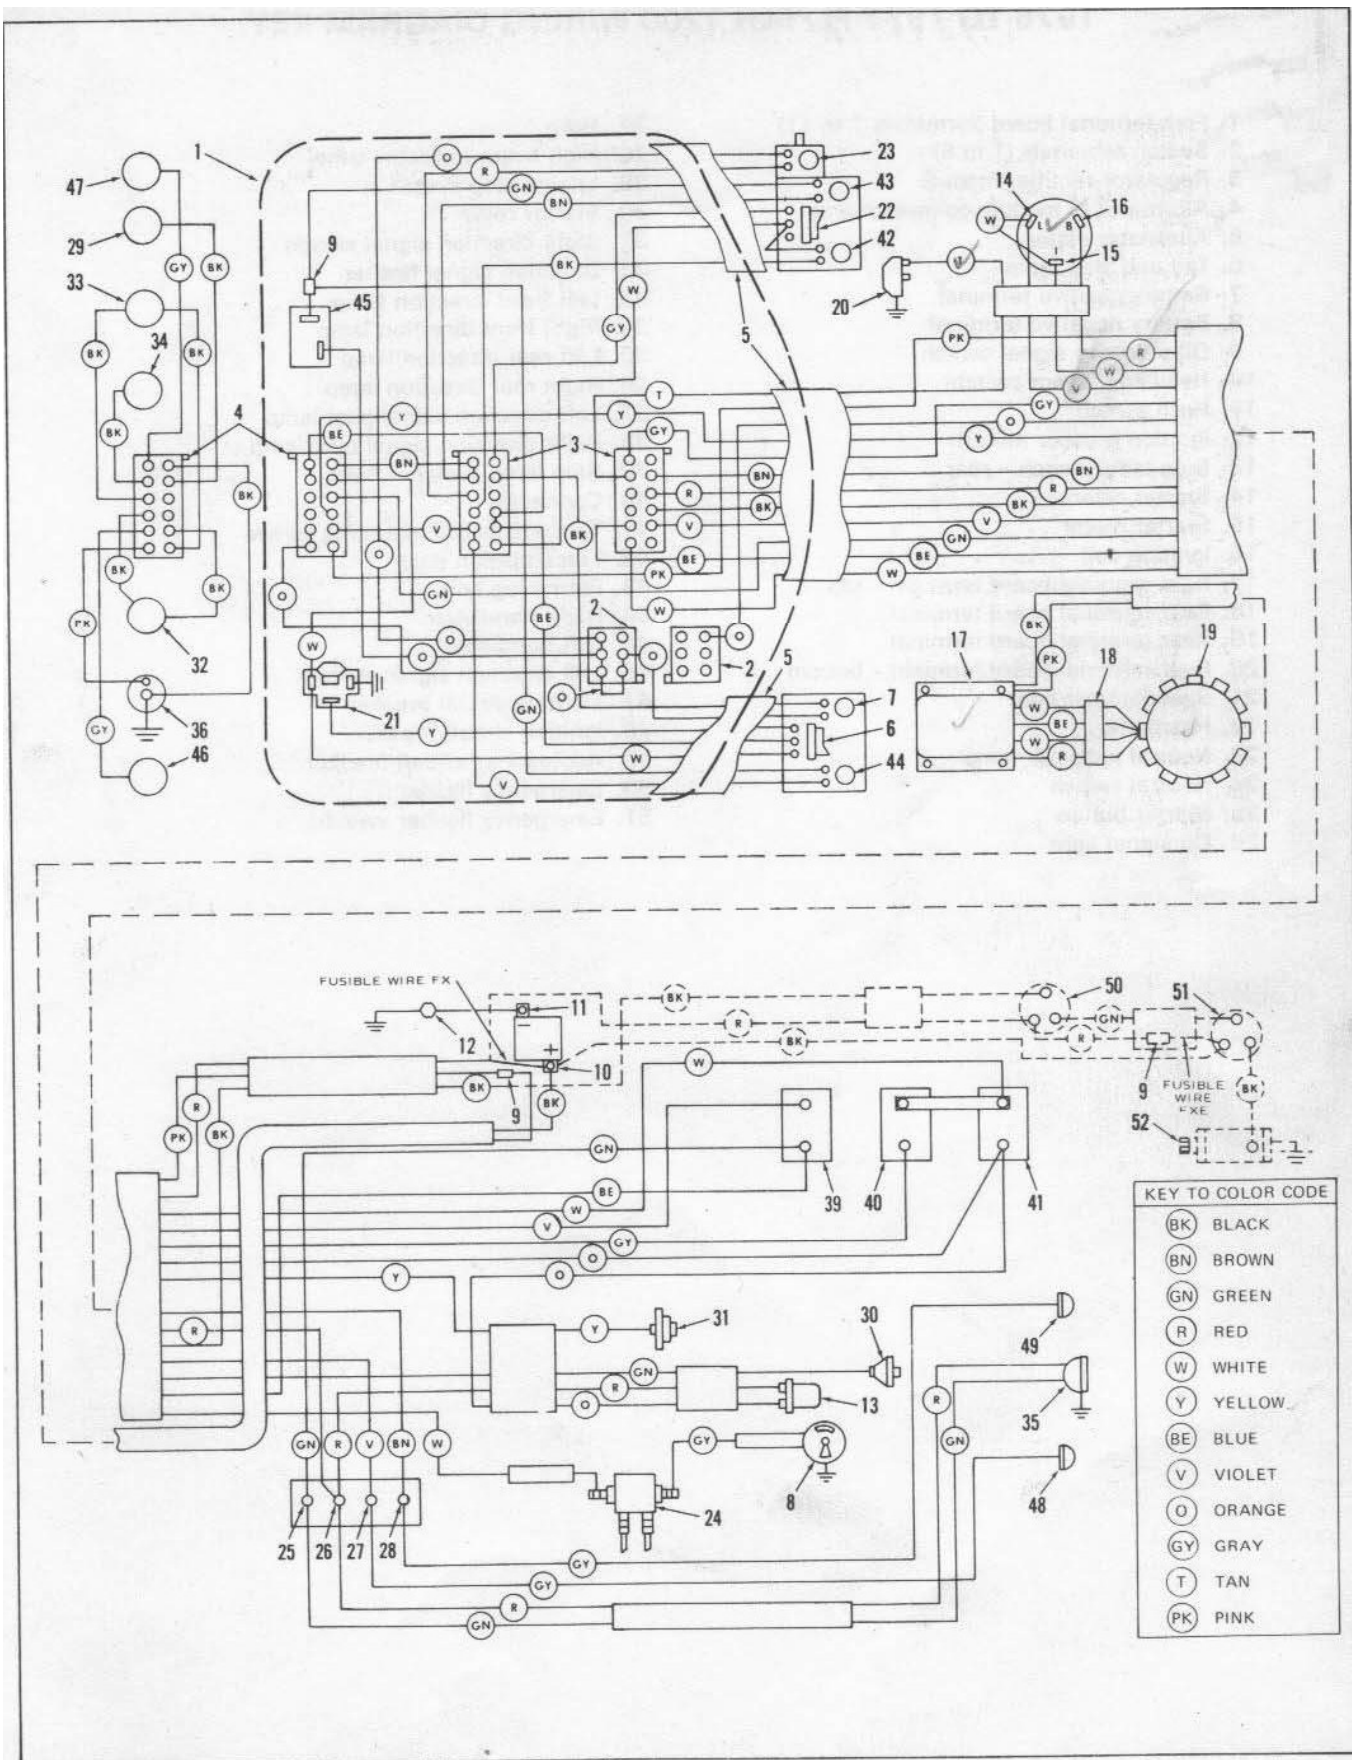


Figure 5-1H. 1975 FX/FXE 1200 Wiring Diagram

1976 TO 1977 FL/FLH 1200 WIRING DIAGRAM KEY

1. Fork terminal board (terminals 1 to 11)
2. Switch terminals (1 to 6)
3. Regulator-rectifier module
4. Alternator to module connector plug
5. Alternator stator
6. Tail and stop lamp
7. Battery positive terminal
8. Battery negative terminal
9. Oil pressure signal switch
10. Headlamp beam switch
11. Horn switch
12. Ignition breaker (timer)
13. Stop lamp switch - rear
14. Starter solenoid
15. Starter motor
16. Ignition coil
17. Rear terminal board terminal - top
18. Rear terminal board terminal
19. Rear terminal board terminal
20. Rear terminal board terminal - bottom
21. Speedometer light
22. Headlamp
23. Neutral indicator lamp
24. Neutral switch
25. Starter button
26. Oil signal light
27. Horn
28. High beam indicator lamp
29. Engine stop switch
30. Starter relay
31. Right direction signal switch
32. Direction signal flasher
33. Left front direction lamp
34. Right front direction lamp
35. Left rear direction lamp
36. Right rear direction lamp
37. Left direction signal pilot lamp
38. Right direction signal pilot lamp
39. Stop lamp switch - front
40. Connector
41. Terminal board mounting screw
42. Transmission stud
43. Frame lug bolt
44. Right handlebar
45. Left handlebar
46. Left direction signal switch
47. Lighting circuit breaker
48. Ignition circuit breaker
49. Accessories circuit breaker
50. Emergency flasher
51. Emergency flasher switch