



INSTALLATION INSTRUCTIONS FOR OIL TEMP. GAUGE

- 1] REMOVE AMBIENT AIR TEMP. GAUGE.
- 2] FOLD BACK AND TAPE OUT OF THE WAY 2 WAY PLUG FROM EXISTING HARNESS.
- 3] INSTALL NEW GAUGE USING "J" BRACKETS AND FASTENERS AS SHOWN. MAXIMUM RECOMMENDED TIGHTENING TORQUE FOR ALL HARDWARE IS 6LB.-IN. CAUTION OVER TIGHTENING MOUNTING HARDWARE MAY DAMAGE INSTRUMENT AND VOID WARRANTY.
- 4] INSTALL SUPPLIED DEUTSCH PLUG INTO EXISTING 3 WAY PLUG AS SHOWN IN DETAIL 1.

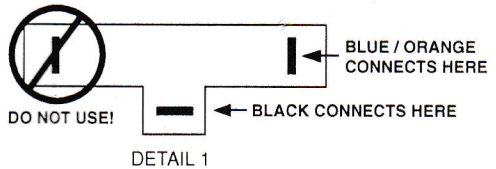

- 5] INSTALL DEUTSCH PLUG INTO BACK OF GAUGE.
- 6] REMOVE PLUG FROM OIL PAN & INSTALL SENDER AS SHOWN IN DETAIL 2. (DO NOT USE LOCK-TITE, TEFLON TAPE, OR ANY OTHER BARRIER WHEN INSTALLING SENDER).

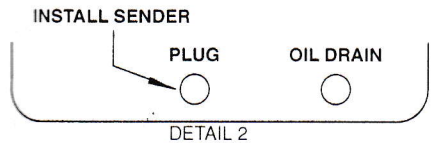

- 7] CONNECT WIRE (BLACK/RED, SUPPLIED) TO SENDER & ROUTE ALONG. RIGHT SIDE FRAME RAIL TO DASH
- 8] CUT BLACK/RED WIRE TO LENGTH AT NEW GAUGE.
- 9] STRIP BLACK/RED WIRE 5/16", TERMINATE WITH SUPPLIED SPADE CONNECTOR.
- 10] CONNECT BLACK/RED SENDER WIRE TO RED WIRE IN DEUTSCH PLUG.

